




Filtration made easy...

OIL CONDITIONING SYSTEMS SPARE PARTS LIST

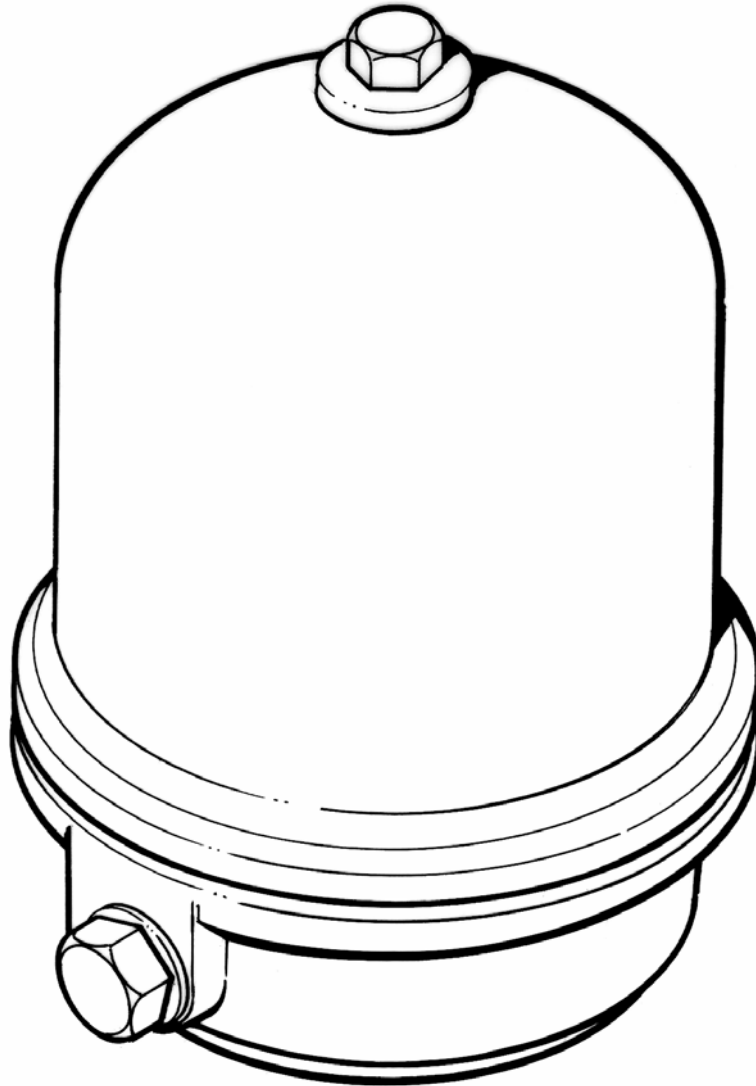

Working
Together



FM025 - 03/04/04RD/13RD SERIES

MANN+HUMMEL FM025 Oil Cleaning Centrifuge Maintenance Procedure

Applicable for the FM025-03/04/04RD/13RD Centrifuge Range

The MANN+HUMMEL FM025 Oil Cleaning Centrifuge should be cleaned at regular intervals ensuring that the thickness of the dirt deposit inside the rotor does not exceed approximately 20mm. This operation is normally carried out after a specified period of operational use and may be combined with other maintenance procedures.

Maintenance Procedure

1. Stop the flow of oil to the centrifuge by either stopping the engine or isolating the centrifuge from the lubricating system by means of a valve. Ensure the centrifuge has come to a complete stop before proceeding.
2. Unscrew the cover nut and remove the centrifuge cover. Examine the centrifuge body seal and replace if damaged (kit P/N 6899076501).
3. Allow the oil to drain out of the rotor assembly. This may be assisted by raising the rotor on the spindle. Withdraw the rotor assembly vertically upwards from the spindle. The rotor should be removed and replaced on the spindle with care in order to ensure that the rotor bearings are not damaged.
4. Unscrew the rotor cover nut and separate the rotor cover from the rotor body.
5. Remove the standtube.
6. Remove sludge deposits from the inside of the rotor cover using a spatula. Clean the rotor components using a suitable cleaning fluid. Ensure that all rotor components (including the two nozzles located in the rotor body), are thoroughly cleaned and free from debris before re-assembly.
7. Examine the rotor assembly O ring for damage and renew if necessary (kit P/N 6899076501).
8. Reassemble the rotor assembly.
9. Replace the rotor on the spindle and check that the rotor spins freely.
10. Replace the centrifuge cover and tighten the filter cover nut to 15Nm.
11. With the centrifuge running, check all joints for leaks.

Important Notes

The MANN+HUMMEL Oil Cleaning Centrifuge is designed to provide extended service without the need to replace major components. However, after extended periods of operation, wear and damage to the centrifuge spindle and rotor assembly may become evident. For this reason it is recommended that the centrifuge spindle and rotor assembly bearings are visually inspected for damage and wear during the cleaning process. If excessive wear or bearing play is evident, the rotor body assembly (p.n. 6899054701) and/or the centrifuge body assembly should be replaced.

The FM025-4/04RD/13RD centrifuge assemblies are fitted with a cut off valve (C.O.V.) which is located in the centrifuge body. The C.O.V. is designed to protect the engine by stopping the supply of lube oil to the centrifuge at start-up and during periods when the oil pressure is below the C.O.V. rating. This item is intended to provide maintenance free operation for extended periods and should only be disassembled and inspected for damage if a problem becomes evident.

Installation

Mounting:
The centrifuge must be securely mounted on the engine, ensuring that the cleaned oil is able to drain back to the sump under gravity. A position should be selected that is affected as little as possible by transmitted vibration from the engine and ensuring that there is sufficient headroom for easy removal of the rotor from the spindle. The centrifuge should be mounted vertically where possible; if an angle mounting is necessary, this should not be more than 15° from the vertical.

Oil Pressures:
Oil pressures should be no less than 2.2 bar and a maximum of 7 bar, the preferred range being 3.5 bar to 6.0 bar. An oil feed should be selected as close to the oil pump as possible and preferably before the oil cooler and full flow filter if fitted. The oil feed pipe should be at least Ø6mm and the oil drain pipe at least Ø25mm.

Maintenance Action

Every Oil Drain Interval:

- Clean Rotor Assembly
- Inspect Centrifuge Body Seal & Rotor Body O Ring. Replace if damaged (Kit No. 6899076501)
- Inspect Centrifuge Cover Nut O Ring for leaks. Replace if necessary (Kit No. 6899076501)
- Inspect Rotor Bearings for wear and replace Rotor Body Assembly if necessary
- Inspect Spindle for wear and replace Centrifuge Body Assembly if necessary

Engine Overhaul:

- Replace Centrifuge

Please note that this should be used as a guide only. Maintenance intervals for the centrifuge are dependant on a number of factors and differ with engine type and operational environment.

Spare Parts List

FM025	Part Number	QTY	FM025-03 (6899111601)	FM025-04 (6899111701)	FM025-04RD (6899141901)	FM025-13RD (6899145801)
CUT OFF VALVE RATING (BAR)			-	1.3	1.3	1.3
OIL INLET THREAD SPECIFICATION			1/4" BSP	1/4" BSP	1/4" BSP	1/4" BSP

BODY ASSEMBLY	Part Number	QTY	FM025-03 (6899111601)	FM025-04 (6899111701)	FM025-04RD (6899141901)	FM025-13RD (6899145801)
	6899025701	1	•			
	6899026001	1		•		
	6899226301	1			•	
	6899226401	1				•

ROTOR ASSEMBLY	Part Number	QTY	FM025-03 (6899111601)	FM025-04 (6899111701)	FM025-04RD (6899141901)	FM025-13RD (6899145801)
	6899043901	1	•	•	•	•
ROTOR BODY ASSEMBLY	6899054701	1	•	•	•	•
ROTOR COVER	6890462101	1	•	•	•	•
STAND TUBE	6890321401	1	•	•	•	•
COVER NUT	6890187001	1	•	•	•	•
NOZZLE	6890491001	2	•	•	•	•

COVER ASSEMBLY	Part Number	QTY	FM025-03 (6899111601)	FM025-04 (6899111701)	FM025-04RD (6899141901)	FM025-13RD (6899145801)
	6899033701	1	•	•		
	6899314401	1			•	•
COVER	6899063201	1	•	•		

FM025 KITS	Part Number	QTY	FM025-03 (6899111601)	FM025-04 (6899111701)	FM025-04RD (6899141901)	FM025-13RD (6899145801)
CUT OFF VALVE (C.O.V.) KIT	6899076601	1		•	•	•
COVER FIXING KIT	6899711601	1	•	•	•	•
SEALS KIT	6899076501	1	•	•	•	•

Speak To An Advisor Today About Centrifuge...

ROTOR ASSEMBLY
6899043901

ROTOR COVER NUT
6890187001

ROTOR COVER
6890462101

ROTOR O RING*
KIT No. 6899076501

STANDTUBE
6890321401

ROTOR BODY
6899054701

NOZZLE
6890491001

C.O.V KIT
6899076601

SHUTTLE

SPRING

WASHER

PLUG

COVER ASSEMBLY
6899337701
6899314401

COVER NUT

COVER
6899063201

COVER FIXING KIT
6899711601

COVER NUT O RING*

COVERCLIP

BODY SEAL*
KIT No. 6899076501

COVER ASSEMBLY
6899025701
6899026001
6899226301
6899226401

BASE GASKET*
KIT No. 6899076501


*KIT No. 6899076501 COMPRISES OF: COVER O RING, CENTRIFUGE BODY SEAL, ROTOR BODY O RING & BASE GASKET



1a Station Road
Lenwade
Norwich
Norfolk
NR9 5LY

T +44 (0)1603 870959
F +44 (0)1603 879803
E info@largo-grp.com

Filtration made easy...

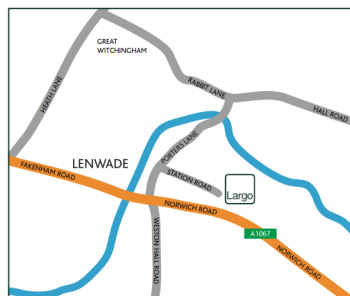

Find Us...

